


Настройка WiFi на ZXV10 H201

Откройте web-браузер (например, Internet Explorer) и введите в строке «Адрес» 192.168.1.1 После появления этого окна укажите имя пользователя: «**admin**» и пароль:«**admin**» и нажмите «**Login**».

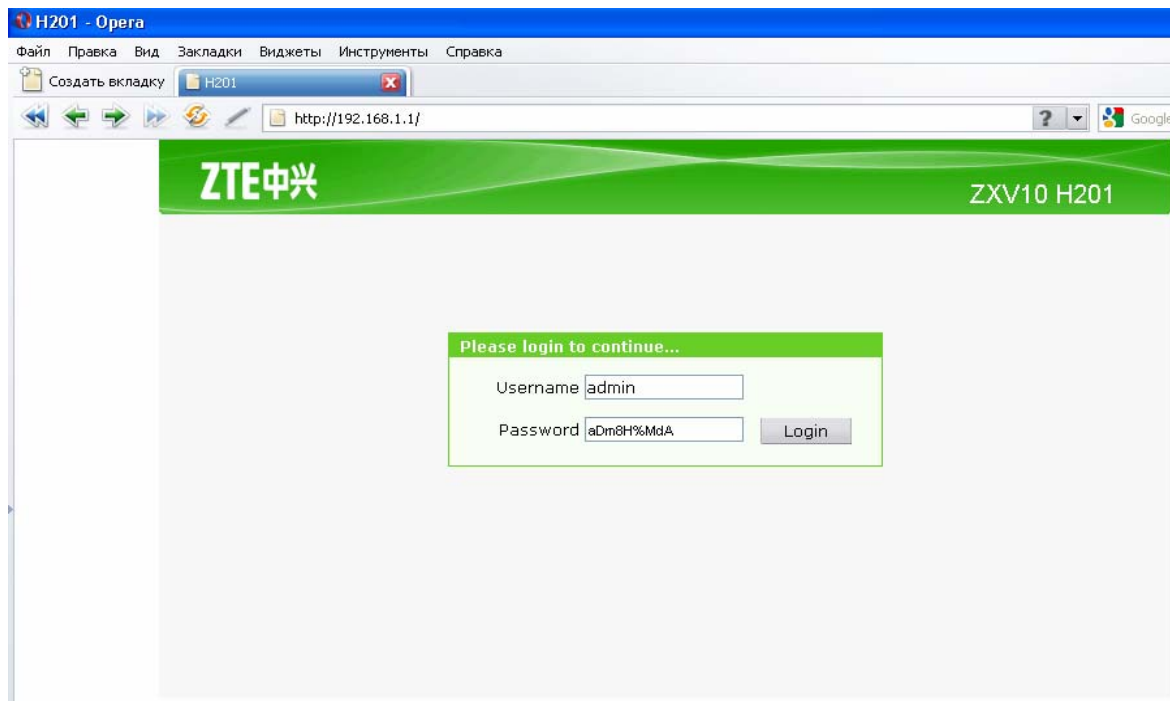

Появляется главное меню модема.

В разделе «**Network**» выберите пункт «**WLAN**», «**Basic**» нажмите кнопку «**Submit**».

ZTE中兴 ZXV10 H201

Status **Network** Security Application Administration Logout

+ WAN Connection
-WLAN
 • Basic
 Security
 Multi-SSID Settings
 Associated Devices
 Access Control List
 + Address Management
 + Routing Management

Enable Wireless RF

Mode **Mixed(802.11b+802.11g)**

Country/Region All

Channel Auto

Beacon Interval 100 ms

Tx Rate Auto

Transmitting Power 100%

QoS Type Disabled

RTS Threshold 2347

DTIM Interval 1

Fragment Threshold 2346

Submit Cancel

Copyright © 2009 ZTE Corporation. All rights reserved.

Теперь в пункте «WLAN», «Security» установите Choose SSID «SSID1», Authentication Type «WPA/WPA2-PSK»

ZTE中兴 ZXV10 H201

Status Network **Security** Application Administration Logout

+ WAN Connection
 -WLAN
 Basic
 • **Security**
 Multi-SSID Settings
 Associated Devices
 Access Control List
 + Address Management
 + Routing Management

Choose SSID **SSID1**

Authentication Type **WPA/WPA2-PSK**

WPA Passphrase _____ (characters)

WPA Group Key Update Interval _____

WPA Encryption Algorithm **WPA/WPA2-PSK**

Submit Cancel

Copyright © 2009 ZTE Corporation. All rights reserved.

На появившейся странице укажите пароль (от 8 ~ 63 символ) и **TKIP+AES**. Нажмите кнопку «Submit».

ZTE中兴 ZXV10 H201

Status Network Security Application Administration Logout

+ WAN Connection
-WLAN
Basic
● Security
Multi-SSID Settings
Associated Devices
Access Control List
+ Address Management
+ Routing Management

Choose SSID: SSID1
Authentication Type: WPA/WPA2-PSK
WPA Passphrase: 12345678 (8 ~ 63 characters)
WPA Group Key Update Interval: 600 sec
WPA Encryption Algorithm: TKIP+AES

Submit Cancel

Copyright © 2009 ZTE Corporation. All rights reserved.

Теперь в пункте «WLAN», «Multi-SSID Settings» установите флажок **Enable SSID**, вводите **SSID Name** (например **Uzonline**) и нажмите кнопку **“Submit”**.

ZTE中兴 ZXV10 H201

Status Network Security Application Administration Logout

+ WAN Connection
-WLAN
Basic
Security
● Multi-SSID Settings
Associated Devices
Access Control List
+ Address Management
+ Routing Management

Choose SSID: SSID1
Hide SSID:
Enable SSID:
Enable SSID Isolation:
Maximum Clients: 32 (1 ~ 32)
SSID Name: Uzonline (1 ~ 32 characters)
Priority: 0

Submit Cancel

Copyright © 2009 ZTE Corporation. All rights reserved.

На этом настройка устройства закончена. Чтобы выйти из настроек нажмите **“Logout”**.

+ WAN Connection

-WLAN

Basic
Security

◆ Multi-SSID Settings

Associated Devices
Access Control List

+ Address Management

+ Routing Management

Choose SSID

Hide SSID

Enable SSID

Enable SSID Isolation

Maximum Clients (1 ~ 32)

SSID Name (1 ~ 32 characters)

Priority

Submit

Cancel